




Hamwells®

Blue

Calibration Manual Blue 12, 16, 21 & Blue HE

2024 v1.2

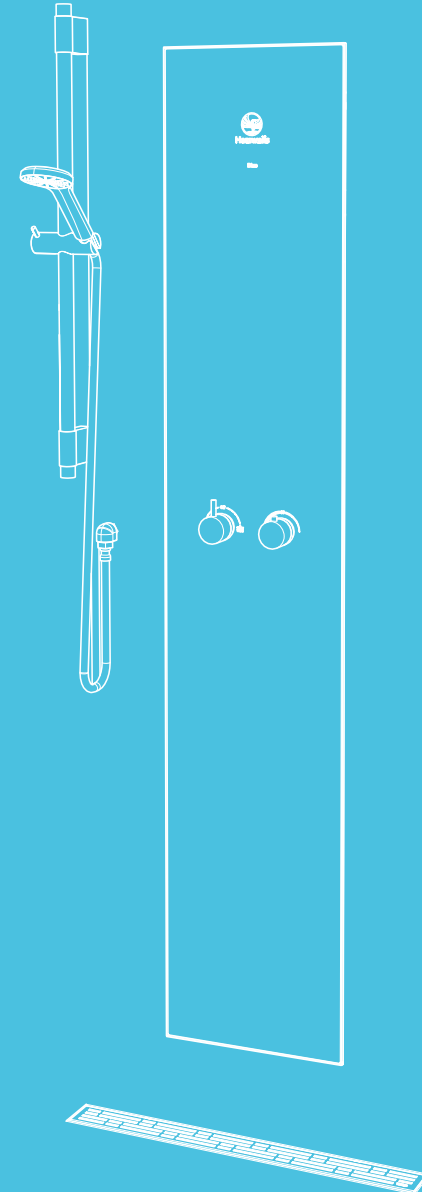



This calibration manual refers to the Hamwells Blue and has been prepared for the end user. Please read this instruction manual carefully for proper calibration of the Blue. If you need additional technical information or the problem still persists, please contact us:

© 2024 Hamwells Nederland B.V.

Pelgrimsstraat 3, 3029 BH Rotterdam, the Netherlands

T +31 (0)85 - 303 64 96, E info@hamwells.com

I www.hamwells.com

This document is copyrighted and any reproduction of all or part of this document is strictly prohibited, except with the written permission of Hamwells Nederland B.V. The contents of this document are subject to change without notice. The images shown in this manual are for illustrative purposes. Technical changes, text or printing errors reserved.



Calibration of the Blue is necessary in the following situations:


1. The pump does not start (*the pump has tried several times to start but no running water is measured*).
2. The pump no longer switches off.



Calibration instructions


1. Turn off the Blue's power.

The electrical connection differs per location!

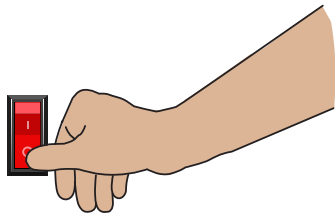


2. Fill the reservoir.

Turn on the shower for approximately 10 seconds to fill the reservoir.

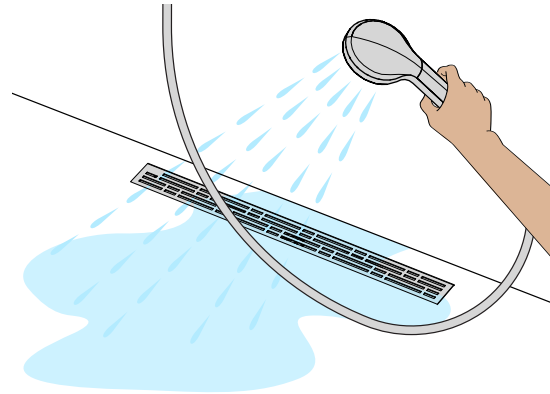

3. Turn the power back on.

You will hear the sound of the pump pumping out the water. This will take about 15 seconds. The pump unit is being calibrated. You will no longer hear this sound after the Blue is turned off!

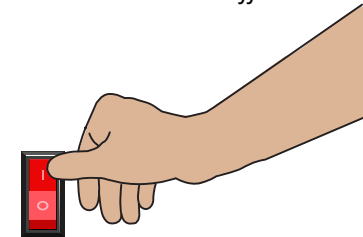

If the Blue still does not work properly, it may be necessary to put a plunger in the reservoir. Then follow the above steps again to calibrate the Blue!



You can also watch the calibration video [here!](#)

